


Out of Hole Tie Down System

Installations Instructions

STEP 1 (Locating the Strap)

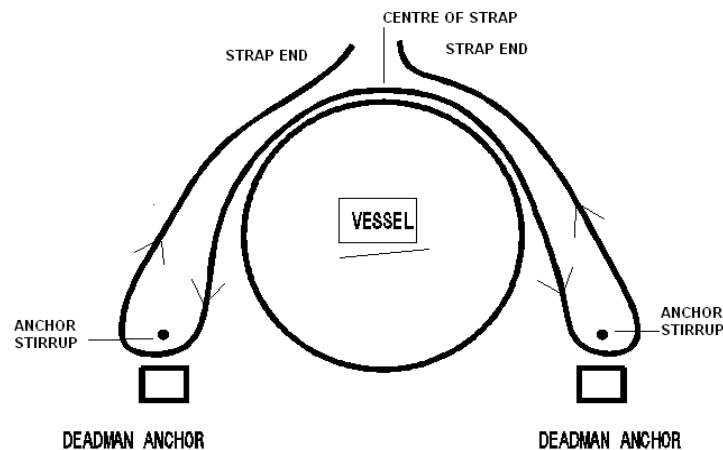


METHOD

- Find the centre of the length of strap provided.
- Place the centre of strap on top centre of tank.
- Pull ends through anchor stirrups from inside to outside.
- Lift ends to top of tank and secure.

NOTE:

When installing an FRP tank, the straps are to be located on the rib in the guides supplied.

STEP 2 (Locating the Binder)

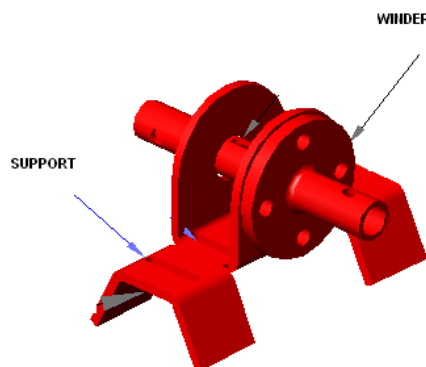


Out of Hole Tie Down System

METHOD

- Place the binder on the top centre line of the vessel
- Ensure that the strap is under the binder (this helps to protect the vessel)
- Pull the two loose ends of the strap over the binder so they are of equal length

STEP 3 (Tensioning the Strap Using the Winding Mechanism)

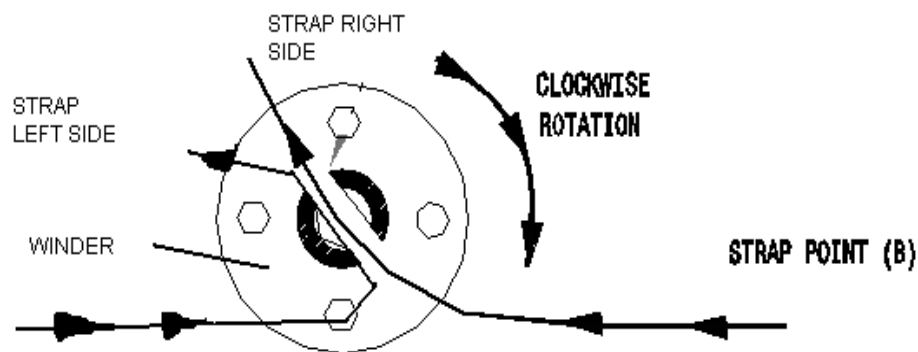

METHOD

- Leave enough slack in the straps to achieve four (4) rotations of the winder (approx 500mm).
- Place both ends of the straps together through the slot in the winder shaft.
- Wind the straps clockwise onto the shaft using a bar, heavy screwdriver etc to achieve four (4) winds. Use the tightening holes provided in the shaft.
- Tension the strap to align holes in the winder and the base support, while keeping tension on the strap insert bolt supplied and tighten nut.

Tank Solutions Pty Ltd

ABN 59 142 807 949

e sales@tanksolutions.com.au w www.tanksolutions.com.au

New South Wales: 513 Tomago Road, Tomago, NSW 2322. PO Box 623, Raymond Terrace, NSW 2324. p 61 2 4964 8270 f 61 2 4964 8522

Queensland: Unit 3, 40 Ingleston Road, Wakerly, Qld 4154. p 61 7 3390 4800 f 61 7 3390 4667

Victoria: Factory 23, 167 Princes Highway, Hallam, VIC 3803. p 61 3 9702 3044

Western Australia: (GRP Tank Solutions) 7 Kalmia Road, Bibra Lake, WA 6163. p 61 8 9434 1707 f 61 8 9434 2425